

CONNECTION INFORMATION

MAIN DRAIN OUTLET: - FOR CONNECTION DETAILS SEE MANUAL


MAINS WATER INLET: - FOR CONNECTION DETAILS SEE MANUAL

SAFETY VALVE OUTLETS: - THESE EXHAUST VERTICALLY DOWN CLOSE TO THE FLOOR. THEY MAY NOT BE CONNECTED TO ANY OTHER PIPEWORK

STEAM GENERATOR

BLOWDOWN/DRAIN VALVE: - THIS DISCHARGES INTO THE MAIN DRAIN AND MUST BE KEPT CLOSED WHEN THE GENERATOR IS HOT OR PRESSURISED

ELECTRICAL CONNECTION: - CONSULT INSTRUCTION MANUAL AND MACHINE VOLTAGE RATING PLATE BEFORE ATTEMPTING INSTALLATION

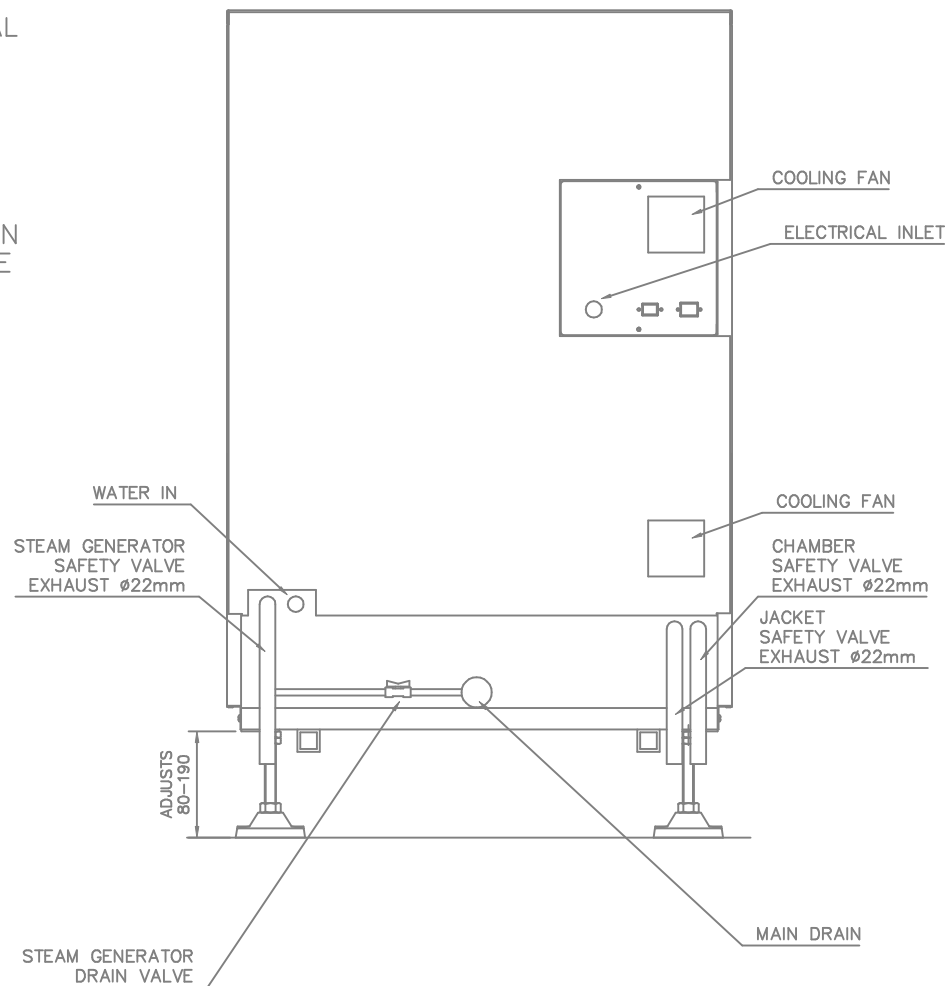

1	03/08/01	Original Issue	-
-	-	-	-
-	-	-	-
-	-	-	-

ISS No.	DATE	MODIFICATION	MOD REQ No.
DRAWN BY HAT	DATE 03/08/01	JOB No.	SCALE 1:10
CHECKED BY HAT	DATE 28/11/01	STORES PART No. None	TOLERANCES -
ISSUED BY HAT	DATE 28/11/01	DERIVED FROM 327-016	UNLESS OTHERWISE STATED DIMENSIONS IN mm
		PAINT/FINISH -	

MATERIAL	STOCK No.	QUANTITY/AREA
-	-	-
-	-	-
-	-	-
-	-	-

**Astell**

Powerscroft Road  
Sidcup Kent  
DA14 5DT  
Tel. 020 8300 4311  
Fax. 020 8300 2247  
<http://www.astell.com>

